

Yarn Tools

# Manual Yarn Winder

## Disassembly Guide

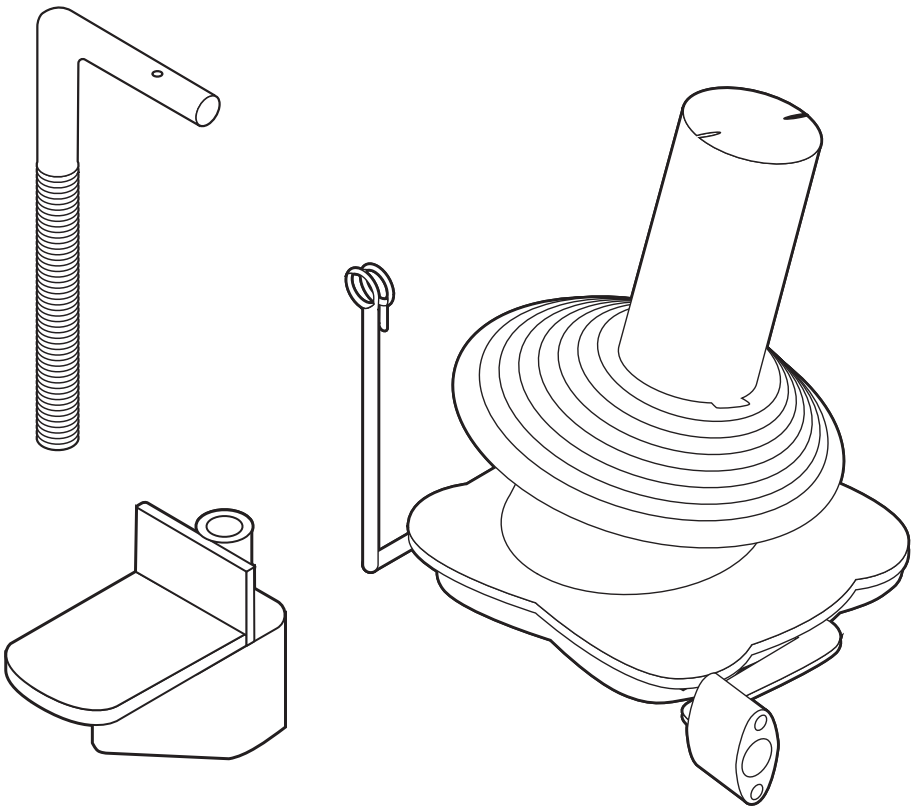


# Yarn Winder Parts List

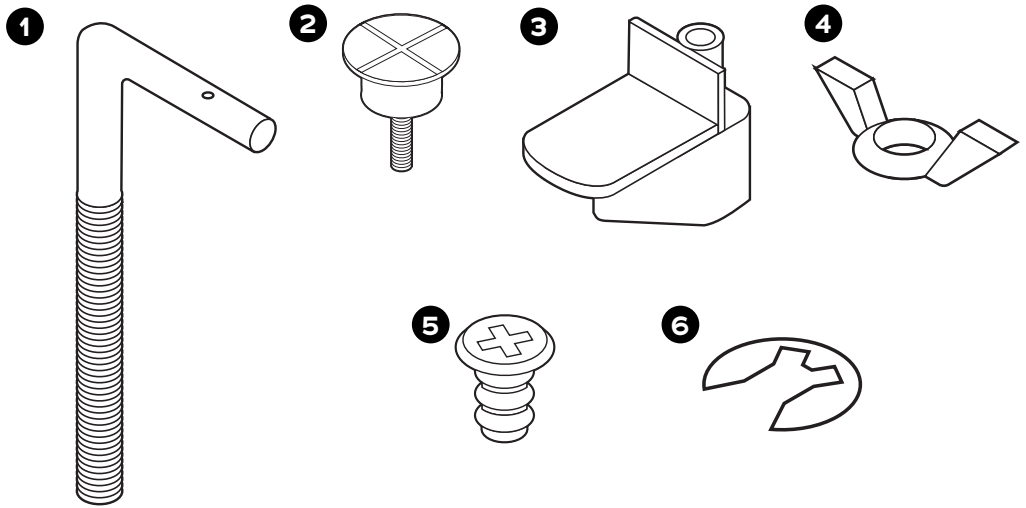


## Small Hardware


1. Clamp Arm
2. Plastic Screw
3. Clamp Foot
4. Metal Wingnut
5. Metal Screw - Cone
6. Circlip - Winder Disc

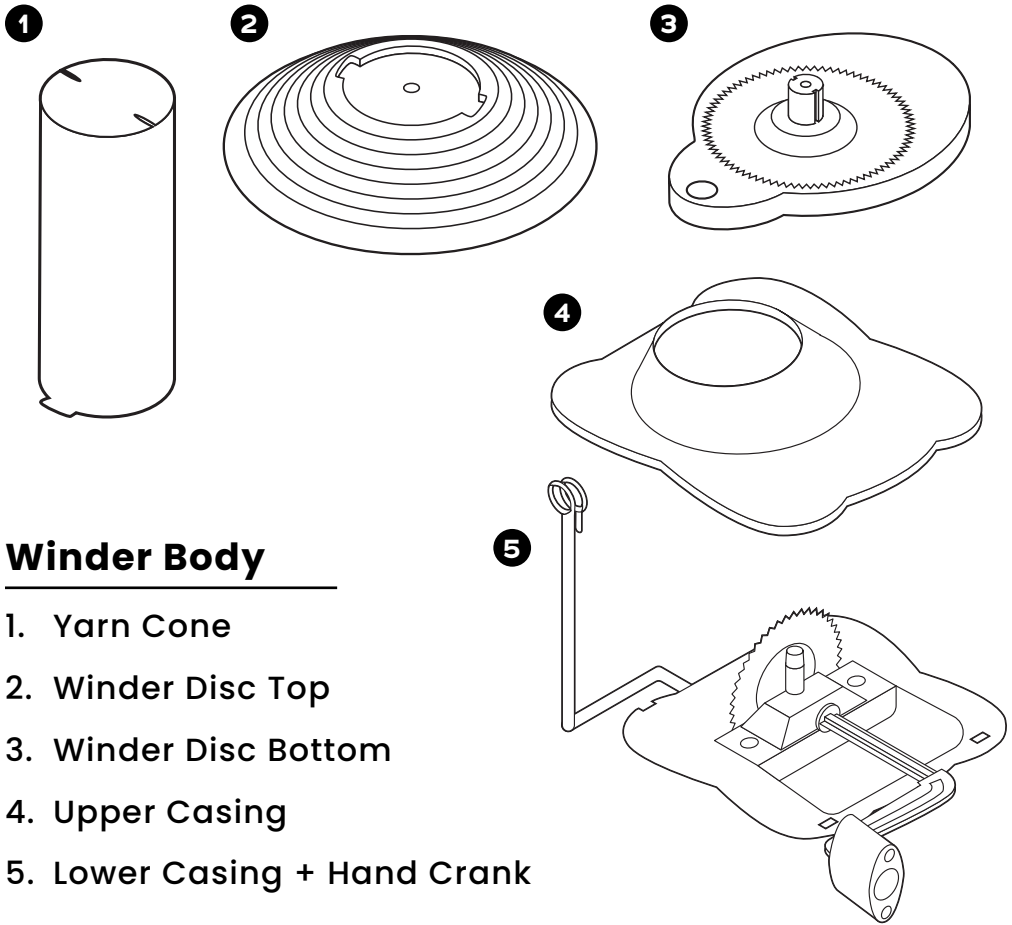


## Winder Body


1. Yarn Cone
2. Winder Disc Top
3. Winder Disc Bottom
4. Upper Casing
5. Lower Casing + Hand Crank

# Body Disassembly

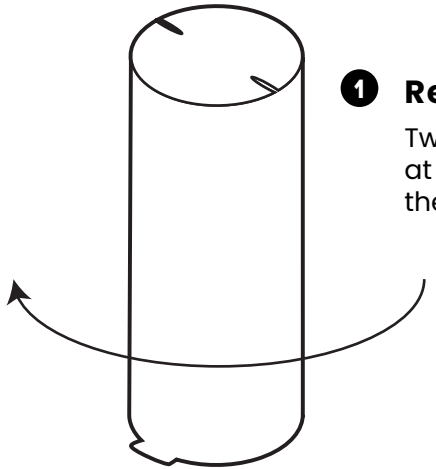

### ❶ Remove Cone

Twist the cone clockwise until the tabs at the base align with the cutouts on the disc top. Lift the cone to remove.

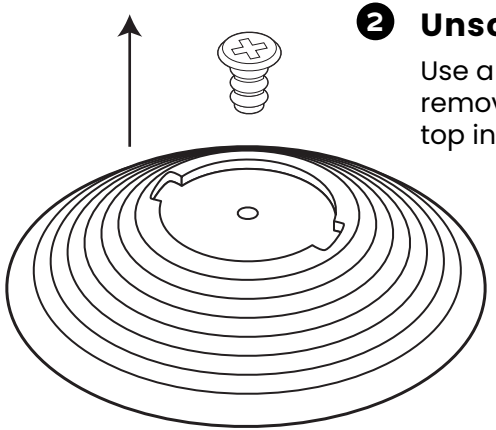


### ❷ Unscrew Disc Top, Remove

Use a Phillips head screwdriver to remove the screw that holds the disc top in place. Lift to remove.

### ❸ Remove Circlip, Disc Bottom

Rotate the disc until the open end of the circlip is visible. Using an open pair of pliers, push on both prongs of the circlip at once and “pop” it out of place.

Once the circlip is removed, the lower disc can be lifted away from the main body of the yarn winder.

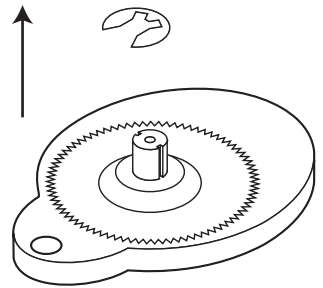

### ❹ Remove Upper Casing

Once the disc has been fully removed, use the tabs on the sides of the winder to remove the upper casing.

The the inner gears of the winder are now accessible for cleaning and repair.

