

Yarn Tools


Yarn Swift

Usage Guide

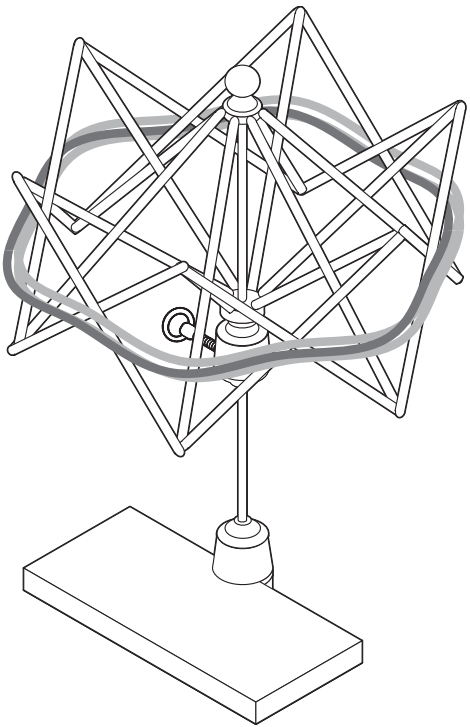

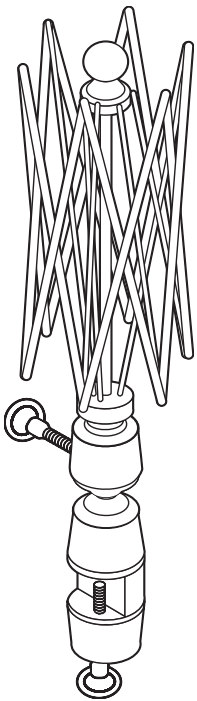


Swift Setup

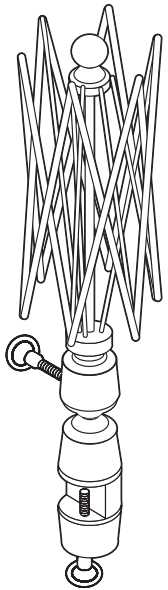


1. Loosen the lower screw key to create room in the clamp, then align the swift on the table edge and tighten to clamp in place.

   Once secure, loosen the upper screw key for the height adjuster so the collar can move freely.

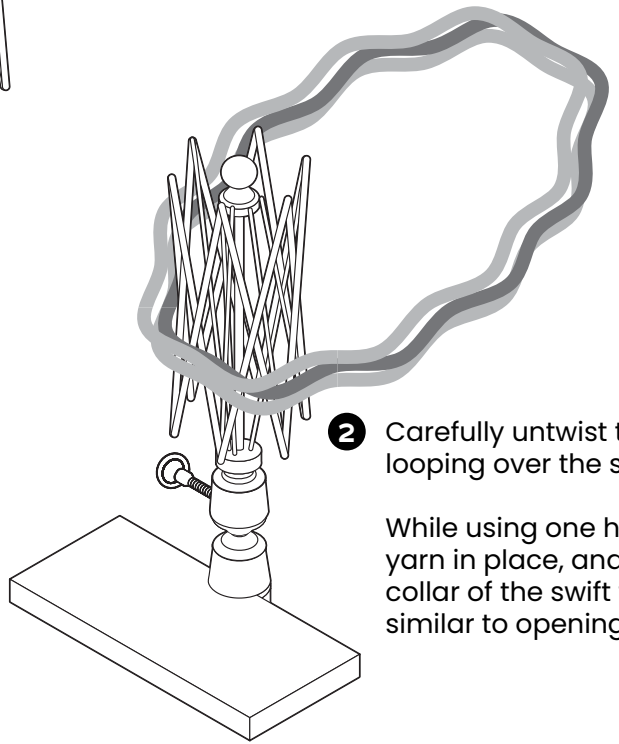

2. Carefully untwist the yarn hank, looping over the swift as shown.

   While using one hand to hold the yarn in place, and pull up on the collar of the swift to open the ribs similar to opening an umbrella.

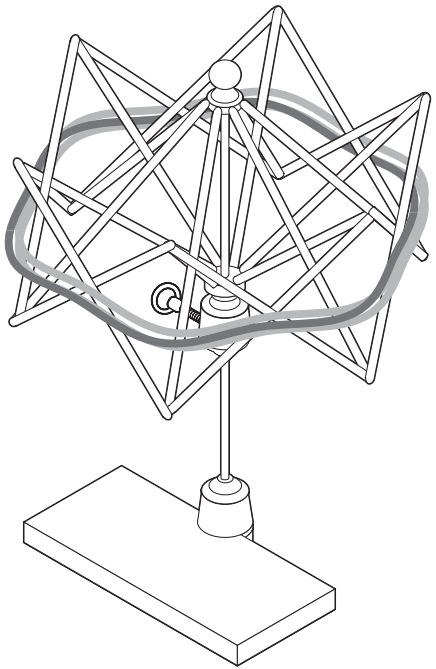

3. Hold the collar while tightening the upper screw key to lock the swift into the open position. The tension of the open ribs should be enough to hold the yarn in place.

   The yarn can now be easily wound by hand or with the use of a winder.

4. When finished, loosen the upper key and slide the collar down again to close the swift. Be sure to retighten the key to lock the swift into the closed position.

   Loosen the lower key and remove the swift from the table edge, retightening the key to keep it secure in storage.

Need a video?
Scan the code to follow along with the official Knit Picks video demo: